

creating history

In a world that is constantly moving,
motion is essential for the development of mankind.


There will be no motion without time,
and no time without motion.

Using motion in our watchwinders to keep time,
gives the ability to create history today.

U S E R G U I D E

BENSON WATCHWINDERS

B L A C K S E R I E S I I



ROTOR SELECTION & DISPLAY

Select the specific rotor to set your preferences. When the rotor is rotating the display shows "on".



ROTATION DIRECTION

Select the specific rotation direction. The available options are clockwise (right), counter-clockwise (left) and alternate (both directions).



START / STOP

Start or stop the specific rotor.



TURNS PER DAY (TPD)

Select the TPD according to the requirements of your automatic watch(es). The following TPD are available: 600 TPD - 900 TPD - 1200 TPD - 1500 TPD - 1800 TPD - 2100 TPD



LED LIGHTING

Turn LED lighting inside the watch winder on or off. The available colors are white, red, green and blue. Press for 3 seconds to turn off the LED lighting.




SPEED WINDING MODE

Select this function to speed-wind your automatic watch(es). The rotor rotates 240 rotations clockwise and 240 rotations counter-clockwise. After the total of 480 rotations the regular program is resumed.

START / STOP SYSTEM

When the door of the watch winder is opened, the rotors each stop in the 12 o'clock position. This allows you to place or remove watches safely and easily from the watch winder. When the door is closed the rotors will resume the selected program.

REMOTE CONTROL

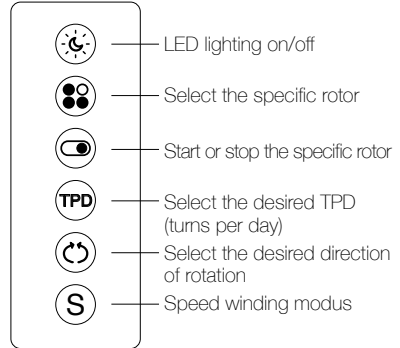


GENERAL INFORMATION

- The touchscreen of the watch winder turns off automatically if it is not used for more than 10 seconds. It is activated again by touching the touchscreen.
- The watch winder has a "power off memory function". After the power is disabled the watch winder will restore the set preferences when power is enabled.
- On the backside is a USB port. The USB function can be used to charge other devices such as a smart-watch, mobile phone, camera etc etc.

HINTS

- When the watch winder is functioning, please do not insert or remove watches. This can damage the motors and/or other mechanical and electronic parts. Wait until the specific rotor has stopped rotating before inserting or removing a watch.
- Please use the original adapter. Use of any other adapter may lead to a defect in the electronic system.
- Close the watch winder door to avoid external influences (dust, humidity etc etc) and keep your watches safe by clicking the watch holder inside the watch winder.



ROTOR SELECTIE & DISPLAY

Selecteer de specifieke rotor en stel de gewenste instellingen in. Wanneer de rotor draait geeft het display "on" aan.

ROTATIE RICHTING

Selecteer de gewenste draairichting. De beschikbare opties zijn rechtsom (met de klok mee), linksom (tegen de klok in) en beide achtereenvolgend (eerst rechtsom vervolgens linksom).

START / STOP

Start of stop de specifieke rotor.

TPD: OMWENTELINGEN PER DAG

Selecteer het aantal TPD in overeenstemming met het aantal TPD dat uw automatische horloge vereist. De volgende aantallen TPD zijn beschikbaar: 600 TPD – 900 TPD – 1200 TPD – 1500 TPD – 1800 TPD – 2100 TPD.

LED VERLICHTING

Schakel de LED verlichting binnenin de watchwinder in of uit. De beschikbare kleuren zijn wit, rood, groen en blauw. Druk 3 seconden om de LED verlichting uit te schakelen.


SPEED WINDING MODUS

Selecteer deze functie om uw automatische versneld van energie te voorzien. De rotor draait 240 omwentelingen met de klok mee en 240 omwentelingen tegen de klok in. Na het totaal van 480 omwentelingen wordt het reguliere programma hervat.

START / STOP SYSTEEM

Wanneer de deur van de watchwinder geopend wordt stoppen de rotoren elk in 12u positie. Hierdoor kunt u veilig en eenvoudig horloges plaatsen of uit de watchwinder nemen. Wanneer de deur wordt gesloten hervatten de rotoren het gekozen programma.

AFSTANDSBEDIENING

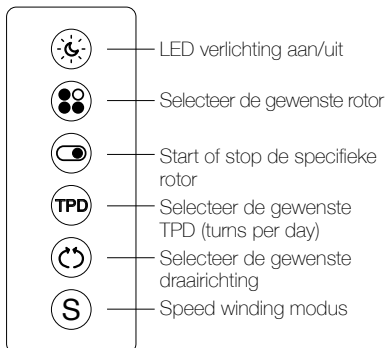

ALGEMENE INFORMATIE

- Het touchscreen van de watchwinder gaat automatisch uit als het langer dan 10 seconden niet gebruikt wordt. Door aanraking van het touchscreen wordt het weer geactiveerd.
- De watchwinder heeft een "power off" memory functie. Wanneer de netstroom (kort) wordt onderbroken zal de watchwinder de instellingen herstellen wanneer de watchwinder weer van netstroom wordt voorzien.
- De achterkant van de watchwinder herbergt een USB functie. Deze USB functie kunt u gebruiken om andere apparaten, zoals een smart-watch, mobiele telefoon of camera, etc, te voorzien van netstroom.

TIPS

- Wanneer de watchwinder functioneert gelieve geen horloges te plaatsen of eruit te nemen. Dit kan de motoren en/of andere mechanische onderdelen beschadigen. Wacht u totdat de specifieke rotor stilstaat alvorens u een horloge plaatst of eruit neemt.
- Gebruikt u a.u.b. de originele adapter. Gebruik van een andere adapter kan leiden tot een defect aan het elektrisch systeem.
- Sluit de watchwinder deur en deksel om invloeden van buitenaf (stof, vochtigheid, etc.) te voorkomen. Door de horlogehouder goed vast te klikken in de watchwinder zorgt u ervoor dat uw horloges veilig zijn.