

Supplied Parts

A	Acrylic Window	(x1)
B	Pillar Screw	(x2)
C	Pillar	(x2)
D	Hinge	(x2)
E	Foam Pad	(x2)
F	Small Washer	(x2)
G	Large Washer	(x2)
H	Black Window Screw	(x2)

Thank you for purchasing the Acrylic Window for your Swiss Kubik MasterBox. Please follow these instructions carefully to ensure a successful installation.

Should you be unsure of anything, then please call for assistance: 0161 4682780

STEP 1



Using a Size 10 Torx driver, carefully remove the 4 screws from the front corners of your MasterBox, turning them anti-clockwise. Keep these screws in a safe place.



STEP 2



Take the Pillar (C) and Pillar Screw (B) and insert into the Top Right and Bottom Right corners. The head of the screw will sit comfortably inside the pillar. DO NOT over tighten.



STEP 3



Remove the film from the back of the Foam Pads (E) to expose the adhesive and then insert into the top of the Pillars (C)




STEP 4



Take the Hinges (D) and screw them into the Top Left and Bottom Left corners of your MasterBox. DO NOT over tighten.

Important

You will notice a 'dimple' (circled left) on each Hinge, it is critical that this faces outward, perpendicular to the left edge of the MasterBox. See Pic X below

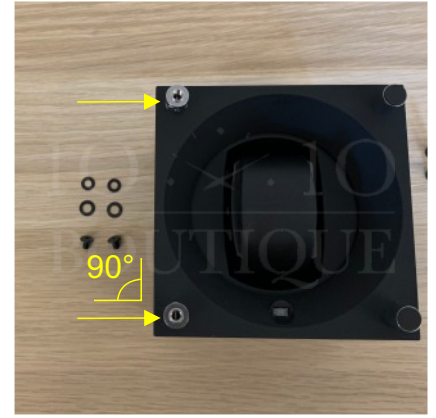


STEP 5




Take the Large Washers (G) and place them on top of the Hinge as circled left.

Take the Acrylic Window (A) and peel back the protective film on both sides to expose the pre drilled holes.

STEP 6

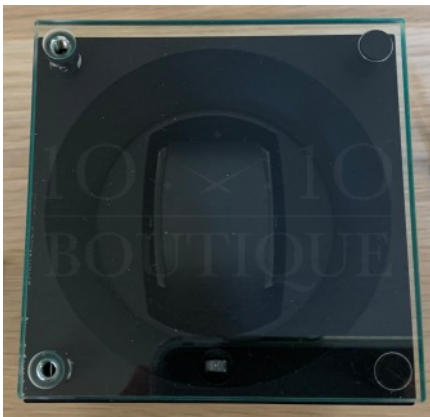

Sit the Acrylic Window (A) on top of the hinges with the countersunk holes facing upwards. Now place the Small Washers (F) in the countersunk holes as per picture right, and then insert the Window Screws (H) but only a couple of turns, DO NOT tighten yet.

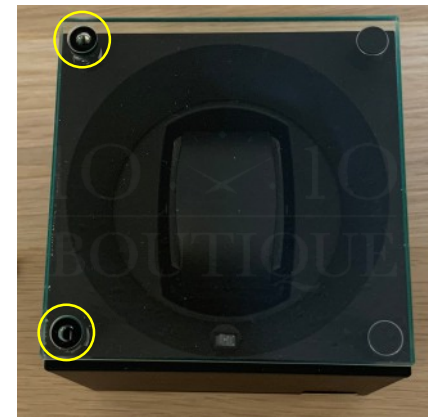

STEP 7



Open the Acrylic Window (A) and then tighten the Window Screws (H) but DO NOT over tighten as this could result in chipping or cracking of the Acrylic.

